

Pos.	Code	Description	Pos.	Code	Description
1	32035	Hydraulic unit housing with piston and cylinder liner	38	96099	Inlet liner
2	32001	Gas-ring	39	33017	Suction valve
3	32041	Nut	40	33108	Intake and exhaust valve assembly
4	32022	Spring	41	33026	Ball seat seal
5	32021	Spring seat	42	33027	Ball seat
6	32020	Retaining ring	43	33028	Ball Ø 11 mm
7	32019	Piston	44	33029	Spring seat
8	32012	Gasket	45	53006	Spring
9	258	Filter	46	33031	Copper seal
10	52005	Oil filter	47	33032	Plug
11	32013	Pressure regulator	48	33005	Washer
12	32150	Adjustment valve label	49	33004	Screw
13	32017	Pressure adjustine knob	50	33007	Ø16 copper washer
14	32016	Stop ring	51	3199	Fitting for return
15	32017/2	Spring	52	33012	1/4 copper washer
16	32015	Pressure regulator body	53	33013	Return tap
17	32014	O-Ring	54	5255	90° fitting 8x10
18	32017/1C	Dowel	55	33012	Copper seal 1/4
19	32030	Cover gasket	56	33015	Return tube fitting
20	32031	Cover	57	33002	Diaphragm
21	32032	Cover screw	58	32103	Gasket
22	32007	Oil level inspection window	59	32104	Cover
23	32018	Cylinder liner	60	32005	Washer
24	32042	Spring pin	61	54004	Screw
25	32033	Insert	62	32006	Plug
26	33003	Diaphragm spacer	63	4318	90° fitting
27	33006	Fitting	64	69011	Screw
28	33007	Ø16 copper washer	65	32024	Washer
29	33101	Paint unit	66	4313	Lift
30	33018	Gasket	67	8371	Screw
31	33020	Valve body	68	32024	Washer
32	33019	Conical shutter	69	52017	Nut
33	33020/1	Spear valve seat	70	32108	Plug
34	33021	Shutter guide	71	16680/1	Suction system
35	33022	Spring	72	16680/2	Return tube
36	33023	Washer	73	16802	Filter
37	33024	Nut	74	16680	Complete suction system